


 







 

 


 





 



 




Originalfernbedienung Ersatzfernbedienung

|   |        |   |        |
|---|--------|---|--------|
|    | Power  |    | Power  |
|    | Source |    | AV     |
|    | 1      |    | 1      |
|    | 2      |    | 2      |
|    | 3      |    | 3      |
|    | 4      |    | 4      |
|    | 5      |    | 5      |
|    | 6      |    | 6      |
|    | 7      |    | 7      |
|    | 8      |    | 8      |
|    | 9      |    | 9      |
|  | 0      |  | 0      |
|  | -/-    |  | Guide  |
|  | PRE-CH |  | Pre Ch |
|  | TV     |  | TV/R   |
|  | CH.MGR |  | Back   |
|  | Sleep  |  | Sleep  |

Originalfernbedienung Ersatzfernbedienung

|   |                   |   |       |
|---|-------------------|---|-------|
|    | PC                |    | Media |
|    | Mute              |    | Mute  |
|    | Vol+              |    | Vol + |
|    | Vol-              |    | Vol - |
|    | P+                |    | Ch +  |
|    | P-                |    | Ch -  |
|    | Menu              |    | Menu  |
|    | Exit              |    | Exit  |
|    | Up                |    | Up    |
|    | Down              |    | Down  |
|    | Right             |    | Right |
|  | Left              |  | Left  |
|  | Enter             |  | Ok    |
|  | [≡+]/PIP          |  | 3D    |
|  | [≡?]/Info         |  | Info  |
|  | [≡]/[ /≡]/TTX/MIX |  | Text  |
|  | Red-/I/I-/P.Mode  |  | Red   |



