

 



 
 

 


 


 
 
 

 
 
 
 
 


 
 
 
 

 

 
 
 
 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-----------|
|  | Power |  | Power |
|  | Eject |  | Eject |
|  | DVD |  +  | Shift + 1 |
|  | TUNER |  +  | Shift + 2 |
|  | PORT |  +  | Shift + 3 |
|  | AUX |  +  | Shift + 4 |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Audio |  | Dual |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|---------------|
|  | Subtitle |  | Subt |
|  | I<< |  | I<< |
|  | Step |  +  | Shift + Pause |
|  | Pause |  | Pause |
|  | >>I |  | >>I |
|  | << |  | << |
|  | Stop |  | Stop |
|  | Play |  | Play |
|  | >> |  | >> |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | Remain |  | Smart |
|  | Tuning+ / CH+ |  | Ch + |
|  | Tuning- / CH- |  | Ch - |
|  | Menu |  | Menu |
|  | Return |  | Back |



