
 
 

 














 


 
 







 

 










Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	Display		Info
	BD / DVD		1
	VCR / DVR		2
	CBL / SAT		3
	GAME		4
	PC		5
	AUX		6
	TUNER		AV
	TUNER		7
	TV / CD		8
	PHONO		9
	PORT		Guide
	NET		Shift + Media
	NET		0
	USB		Media
	USB		Pre Ch

Originalfernbedienung Ersatzfernbedienung




 










 

 
 


 
 

 










	Muting		Mute
	Vol+		Vol +
	Vol-		Vol -
	Home		Smart
	CH+		Ch +
	CH-		Ch -
	SP Layout		D. Menu
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Setup		Options
	Return		Back
	I<<		I<<
	>>I		>>I













 
 




 

 




 

 








[illegible]



 
Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	BD / DVD		1
	VCR / DVR		2
	CBL / SAT		3
	GAME		4
	PC		5
	AUX		6
	TUNER		AV
	TUNER		7
	TV / CD		8
	PHONO		9
	PORT		Guide
	NET		Shift + Media
	NET		0
	USB		Media
	USB		Pre Ch
	Muting		Mute

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Home		Smart
	CH+ / Album+		Ch +
	CH- / Album-		Ch -
	Top Menu		D. Menu
	Menu		Menu
	Up		Up
	Page- / Playlist-		Left
	Enter		Ok
	Page+ / Playlist+		Right
	Down		Down
	Setup		Options
	Return		Back
	I<<		I<<
	I>>		I>>
	<<		<<





Originalfernbedienung Ersatzfernbedienung













 




 

 






 






The image shows a black remote control with a variety of buttons. At the top are a red power button, a black mute button, and an orange shift button. Below these are four blue buttons labeled TV, DVD, SAT, and AUX. The next row includes a 'PLAY MODE' label, a play button, a pause button, a stop button, and a 'REC MODE' label with a red record button. The following row contains left and right arrow buttons, a double left arrow, a double right arrow, and a right arrow with a dot. The next row has buttons for DISC NAV, SOUND, AD, and SETTINGS. This is followed by LIST, DUAL, SUBT, and OPT. The next row includes PROG, SEARCH, PICTURE, and ECO. Below that are SLEEP, TV/R, FORMAT, and 3D. The next row has E-MANUAL, REPEAT, ZOOM, and TIMER. The final row in this section contains D.MENU, TEXT, a triangle up button, and AV. Below these is a 'TOP MENU' label, a MENU button, a central OK button surrounded by four blue arrow buttons (up, down, left, right), and a DISPLAY INFO button. The next row has CLEAR EXIT, a central button with HOME, SMART, APP, and MEDIA, and a RETURN BACK button. Below this is a row with a plus VOL button, a plus CH button, and a minus button. The next row contains buttons for 1, 2, 3, 4, 5, 6, 7, 8, 9, and a FAV button. The next row has GUIDE, 0, and PRE-CH. The bottom row features four colored buttons: A (red), B (green), C (orange), and D (blue). At the very bottom, there is a logo for 'Mandis shop' with a website address 'www.mandis.tv'.



Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	Display		Info
	BD / DVD		1
	VCR / DVR		2
	CBL / SAT		3
	GAME		4
	PC		5
	AUX		6
	TUNER		7
	TV / CD		8
	PHONO		9
	TUNER		AV
	PORT		Guide
	NET		0
	NET		Shift + Media
	USB		Pre Ch
	USB		Media

Originalfernbedienung Ersatzfernbedienung

	Muting		Mute
	Vol+		Vol +
	Vol-		Vol -
	Home		Smart
	CH+		Ch +
	CH-		Ch -
	SP Layout		Shift + Menu
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Setup		Options
	Return		Back
	I<<		I<<
	>>I		>>I




 


 











 

 

 


 

 

 


 



[illegible]



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display		Info
	BD / DVD		1
	VCR / DVR		2
	CBL / SAT		3
	GAME		4
	PC		5
	AUX		6
	TUNER		7
	TUNER		AV
	TV / CD		8
	PHONO		9
	PORT		Guide
	NET		0
	NET	 + 	Shift + Media
	USB		Pre Ch
	USB		Media

Originalfernbedienung Ersatzfernbedienung

	Muting		Mute
	Vol+		Vol +
	Vol-		Vol -
	Home		Smart
	CH+		Ch +
	CH-		Ch -
	SP Layout	 + 	Shift + Menu
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Setup		Options
	Return		Back
	I<<		I<<
	>>I		>>I



[illegible]