

 

 

 

 

 



 
 
 
 
 
 
 

 





 





 
 
 

 

 

 

 
 

 



 
 
 
 
 

 


 



 


**Originalfernbedienung Ersatzfernbedienung**

	Power TV		Power
	1 TV		1
	2 TV		2
	3 TV		3
	4 TV		4
	5 TV		5
	6 TV		6
	7 TV		7
	8 TV		8
	9 TV		9
	0/-- TV		0
	AV TV		AV
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Return TV		Back
	PR+ TV		Ch +

**Originalfernbedienung Ersatzfernbedienung**

 

 



 


















 


 

 


	PR- TV		Ch -
	Play TV		Play
	<< TV		<<
	>> TV		>>
	Record TV		Rec
	Stop TV		Stop
	Pause TV		Pause
	Exit TV		Exit
	Menu TV		Menu
	Violet/Text TV		Text
	Red/Presets TV		Red
	Green/List TV		Green
	Yellow/Info TV		Yellow
	Blue/Guide TV		Blue
	Up TV		Up
	Down TV		Down
	Right/Zoom+		Right




**Originalfernbedienung Ersatzfernbedienung**

	Left/Zoom- TV		Left
	OK TV		Ok
	TV		TV/R
	Demo TV		Pre Ch
	VCR		Smart
	SAT		Media
	DVD		Options
	AUX		Format
	AMP		3D
	Power AUX		Shift + Power
	Red/Presets		Shift + Red
	Green/List AUX		Shift + Green
	Yellow/Info AUX		Shift + Yellow
	Blue/Guide AUX		Shift + Blue
	Up AUX		Shift + Up
	OK AUX		Shift + Ok
	Down AUX		Shift + Down

**Originalfernbedienung Ersatzfernbedienung**

	Right/Zoom+		Shift + Right
	Left/Zoom- AUX		Shift + Left
	Exit AUX		Shift + Exit
	Menu AUX		Shift + Menu
	Violet/Text AUX		Shift + Text
	Return AUX		Shift + Back
	PR+ AUX		Shift + Ch +
	PR- AUX		Shift + Ch -
	1 AUX		Shift + 1
	2 AUX		Shift + 2
	3 AUX		Shift + 3
	4 AUX		Shift + 4
	5 AUX		Shift + 5
	6 AUX		Shift + 6
	7 AUX		Shift + 7
	8 AUX		Shift + 8
	9 AUX		Shift + 9



 






 
 


 


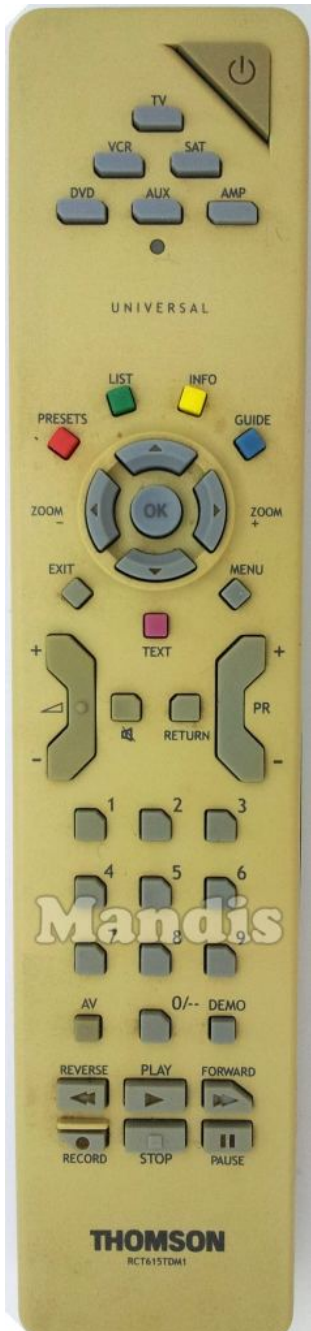


 

 

 

 
 
 
 


 
 


 

 







 

 

 
 
 
 
 

 

 




 
 





 

 
 
Originalfernbedienung Ersatzfernbedienung

	0 AUX	+	Shift + 0
	Play AUX	+	Shift + Play
	<< AUX	+	Shift + <<
	>> AUX	+	Shift + >>
	Stop AUX	+	Shift + Stop
	Record AUX	+	Shift + Rec
	Pause AUX	+	Shift + Pause
	AV AUX	+	Shift + AV
	Demo AUX	+	Shift + Pre Ch

Originalfernbedienung Ersatzfernbedienung



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Power DVD	 Power	 PR+ DVD	 Ch +
 Red/Presets	 Red	 PR- DVD	 Ch -
 Green/List DVD	 Green	 1 DVD	 1
 Yellow/Info DVD	 Yellow	 2 DVD	 2
 Blue/Guide DVD	 Blue	 3 DVD	 3
 Violet/Text DVD	 Text	 4 DVD	 4
 Up DVD	 Up	 5 DVD	 5
 Down DVD	 Down	 6 DVD	 6
 Right/Zoom+	 Right	 7 DVD	 7
 Left/Zoom- DVD	 Left	 8 DVD	 8
 OK DVD	 Ok	 9 DVD	 9
 Exit DVD	 Exit	 0 DVD	 0
 Menu DVD	 Menu	 AV DVD	 AV
 Vol+	 Vol +	 Demo DVD	 Pre Ch
 Vol-	 Vol -	 Play DVD	 Play
 Mute	 Mute	 << DVD	 <<
 Return DVD	 Back	 >> DVD	 >>





 

 

 

 







 

 

 

 
 
 

 

 







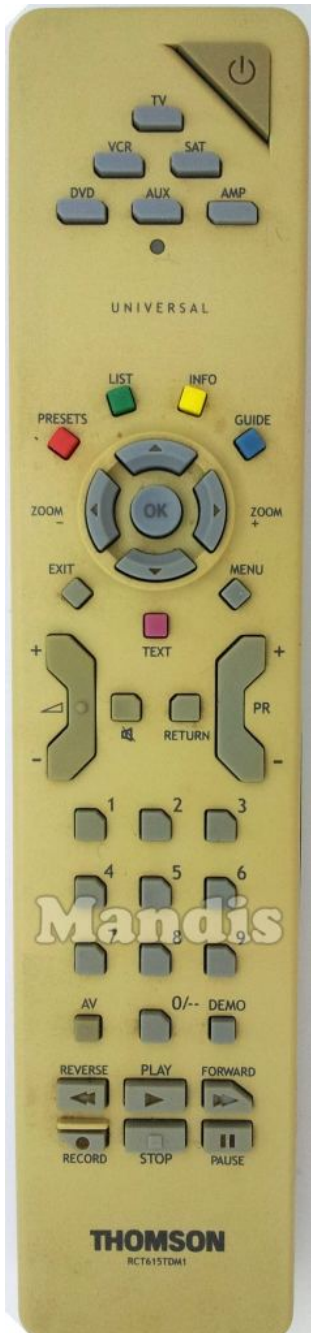 
**Originalfernbedienung    Ersatzfernbedienung**

	Record DVD		Rec
	Stop DVD		Stop
	Pause		Pause
	TV		TV/R
	VCR		Smart
	SAT		Media
	DVD		Options
	AUX		Format
	AMP		3D
	Power VCR		Shift + Power
	Red/Presets		Shift + Red
	Green/List VCR		Shift + Green
	Yellow/Info VCR		Shift + Yellow
	Blue/Guide VCR		Shift + Blue
	Violet/Text VCR		Shift + Text
	Exit VCR		Shift + Exit
	Menu VCR		Shift + Menu

 

 



 
 






 

**Originalfernbedienung    Ersatzfernbedienung**

	Up VCR		Shift + Up
	Down VCR		Shift + Down
	Right/Zoom+		Shift + Right
	Left/Zoom- VCR		Shift + Left
	OK VCR		Shift + Ok
	Return VCR		Shift + Back
	PR+ VCR		Shift + Ch +
	PR- VCR		Shift + Ch -
	1 VCR		Shift + 1
	2 VCR		Shift + 2
	3 VCR		Shift + 3
	4 VCR		Shift + 4
	5 VCR		Shift + 5
	6 VCR		Shift + 6
	7 VCR		Shift + 7
	8 VCR		Shift + 8
	9 VCR		Shift + 9





Originalfernbedienung    Ersatzfernbedienung

 
 

 

 
 
	0 VCR	 + 	Shift + 0
	<< VCR	 + 	Shift + <<
	>> VCR	 + 	Shift + >>
	Play VCR	 + 	Shift + Play
	AV VCR	 + 	Shift + AV
	Stop VCR	 + 	Shift + Stop
	Record VCR	 + 	Shift + Rec
	Pause VCR	 + 	Shift + Pause

Originalfernbedienung    Ersatzfernbedienung


 


 













 

 





 

 

 

 





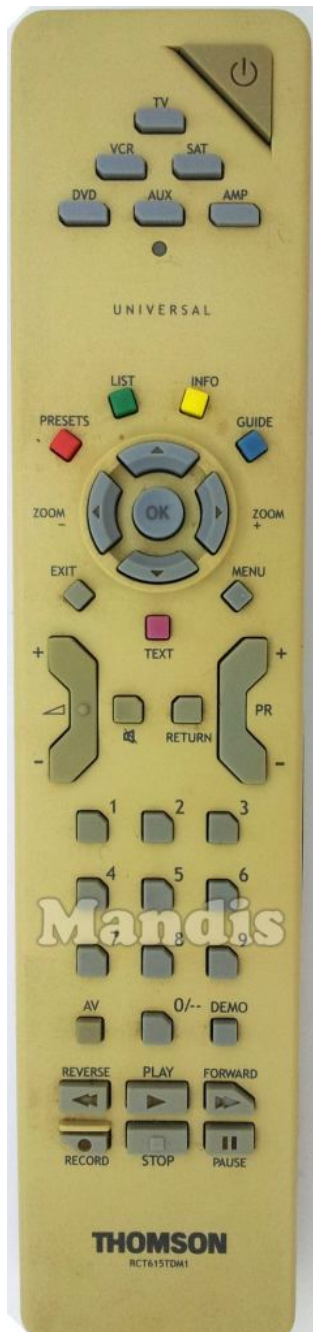 
**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	TV		TV/R
	VCR		Smart
	SAT		Media
	DVD		Options
	AUX		Format
	AMP		3D
	Red/Presets		Red
	Green/List		Green
	Yellow/Info		Yellow
	Blue/Guide		Blue
	Violet/Text		Text
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	OK		Ok

**Originalfernbedienung    Ersatzfernbedienung**

	Exit		Exit
	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Return		Back
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9



 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------	-----------------------	---------------------

	0		0
	AV		AV
	Demo		Pre Ch
	<<		<<
	Play		Play
	>>		>>
	Record		Rec
	Stop		Stop
	Pause		Pause

 

 


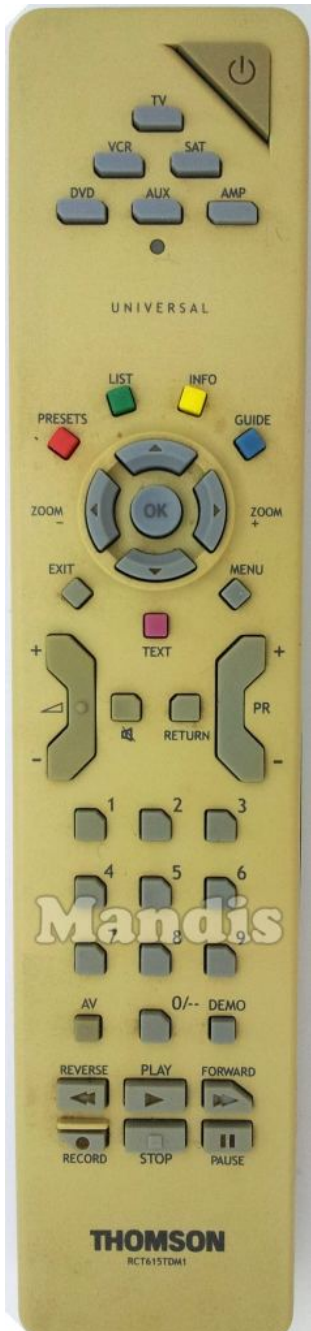


 



 






 



 







 
 







**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	TV		TV/R
	VCR		Smart
	SAT		Media
	DVD		Options
	AUX		Format
	AMP		3D
	Red/Presets		Red
	Yellow/Info		Yellow
	Blue/Guide		Blue
	Violet/Text		Text
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	OK		Ok
	Exit		Exit





 
 


 





**Originalfernbedienung Ersatzfernbedienung**

	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Return		Back
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





**Originalfernbedienung   Ersatzfernbedienung   Originalfernbedienung   Ersatzfernbedienung**

	AV		AV		
	<<		<<		
	Play		Play		
	>>		>>		
	Record		Rec		
	Stop		Stop		
	Pause		Pause		

