
 
 






 


 

 


 
 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	NTSC / PAL		Format
	Audio		Dual
	TV / Radio		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV / Radio		TV/R
	Recall		Back

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide
	i		Info
	Menu		Menu
	Up / CH+		Up
	Down / CH-		Down
	Right / Vol+		Right
	Left / Vol-		Left
	OK		Ok
	Up / CH+		Ch +
	Down / CH-		Ch -
	Right / Vol+		Vol +
	Left / Vol-		Vol -
	↑		Shift + Ch +
	↓		Shift + Ch -
	Exit		Exit
	FAV		Pre Ch
	SAT		Smart



