 

 



 


 
 
 


 

 
 


 

 

 

 

 









Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	Input TV		Shift + 1
	Input VCR1		Shift + 2
	Input DSS/VCR2		Shift + 3
	Input DVD		Shift + 4
	Input TUNER		Shift + 5
	Input CD		Shift + 6
	Input TAPE		Shift + 7
	Input CDR		Shift + 8
	Input MD		Shift + 9
	Input AUX		Shift + 0
	Main Vol+		Vol +
	Main Vol-		Vol -
	TV Vol+		Shift + Vol +
	TV Vol-		Shift + Vol -
	Sleep		Sleep
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	OSD		D. Menu
	Menu		Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	T.Tone		Text
	Menu Off		Exit
	S-Direct		AV
	Night		List
	Display		Info
	Surround AUTO		1
	Surround		2
	Surround DTS		3
	Surround CS II		4
	Surround EX/ES		5





Originalfernbedienung Ersatzfernbedienung













 


 
 

 

 

 





DSP 6	Surround DSP	6	6
M-CH ST 7	Surround M-CH ST	7	7
STEREO 8	Surround	8	8
6.1CH IN 9	6.1 CH IN	9	9
A/D 0	A/D	SETTINGS OPT	Options
BASS +	Bass+	+ CH	Ch +
BASS -	Bass-	- CH	Ch -
TREBLE +	Treble+	SHIFT + + CH	Shift + Ch +
TREBLE -	Treble-	SHIFT + - CH	Shift + Ch -
ATT.	Att.	PICTURE FORMAT	Format

Originalfernbedienung Ersatzfernbedienung

 









 
 
 
 
 
 

 







 





 







**Originalfernbedienung    Ersatzfernbedienung**

	POWER		Power
	TV Vol-		Shift + Vol -
	TV Vol+		Shift + Vol +
	Input TV		Shift + 1
	Input VCR1		Shift + 2
	Input DSS/VCR2		Shift + 3
	Input DVD		Shift + 4
	Input TUNER		Shift + 5
	Input CD		Shift + 6
	Input TAPE		Shift + 7
	Input CDR		Shift + 8
	Input MD		Shift + 9
	Input AUX		Shift + 0
	Sleep		Sleep
	Mute		Mute
	S-Direct		AV
	Night		List

**Originalfernbedienung    Ersatzfernbedienung**

	Display		Info
	Bass+		Ch +
	Bass-		Ch -
	Treble+		Shift + Ch +
	Treble-		Shift + Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Att.		Format





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Memo		Smart
	P.Scan		Media
	Main Vol+		Vol +
	Main Vol-		Vol -
	Prev. Station / PTY-		I<<
	Next Statio /		>>I
	Tune-		<<
	Tune+		>>
	Mode		Dual
	RDS		Subt
	F.Direct		3D
	PTY		Options

