



Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	Open/Close / Eject		Eject
	Mute		Mute
	Speaker		Red
	Test		Green
	Sound Mode		Yellow
	Sound Mode		Shift + Dual
	Sound Effect		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9


 
 










 
 



 



 
 
 
 
 
 




 
 
Originalfernbedienung Ersatzfernbedienung

	0		0
	Angle		Format
	Zoom / ATR.		Shift + Eject
	Repeat / Mode		Text
	Step		Pause
	Prog/Trk+		Ch +
	Prog/Trk-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	DVD		Shift + 1
	VCR		Shift + 2
	FM/AM		Shift + 3
	INPUT		AV
	INPUT		Shift + 4
	I<< / <<		I<<
	Stop		Stop
	Play/Pause		Play

 

 
 

 
 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	>> / >>		>>
	Setup		Options
	Setup		Menu
	Display		Info
	Clear		Exit
	Disc Menu		D. Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Rec		Rec
	Return / A.Dub		Back
	Index / Mark		Pre Ch
	Title / Speed		Media
	Subtitle / Timer		Subt
	Subtitle / Timer		Shift + AV

Originalfernbedienung Ersatzfernbedienung

	Screen Fit / SVHS		Smart
	Audio		Dual
	TV / VCR		TV/R
	REV		<<
	FWD		>>

