



Originalfernbedienung Ersatzfernbedienung

	TV		TV/R
	CD		Yellow
	DVD		Blue
	Tuner/Band		Green
	Tape		Red
	VCR		Smart
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Select		Ok
	Menu		D. Menu
	Display		Info
	Disc/Deck 1/2		Menu

Originalfernbedienung Ersatzfernbedienung

	Tv/AV		AV
	Pro Logic		Media
	Center-		Shift + Ch -
	Center+		Shift + Ch +
	Test		Back
	Surround +		Ch +
	Surround -		Ch -
	Power TV		Power
	Tv Vol Up		Shift + Vol +
	Tv Vol Down		Shift + Vol -
	1 Tv		1
	2 Tv		2
	3 Tv		3
	4 Tv		4
	5 Tv		5
	6 Tv		6
	7 Tv		7





Originalfernbedienung Ersatzfernbedienung

	8 Tv		8
	9 Tv		9
	0 Tv		0
	>10/--- Tv		Guide

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power DVD		Power
	TV		TV/R
	VCR		Smart
	Tuner/Band		Green
	Tape		Red
	CD		Yellow
	DVD		Blue
	Play DVD		Play
	I<</<< DVD		<<
	Stop DVD		Stop
	>>/>>I DVD		>>
	Disc/Deck 1/2		Menu
	Display		Info
	Menu		D. Menu
	Up		Up
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Select		Ok
	Test		Back
	Pro Logic		Media
	Center-		Shift + Ch -
	Center+		Shift + Ch +
	Surround +		Ch +
	Surround -		Ch -
	1 DVD		1
	2 DVD		2
	3 DVD		3
	4 DVD		4
	5 DVD		5
	6 DVD		6
	7 DVD		7
	8 DVD		8
	9 DVD		9





Originalfernbedienung Ersatzfernbedienung

	0 DVD		0
	>10/-/- DVD		Guide
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power CD		Power
	TV		TV/R
	VCR		Smart
	CD		Yellow
	DVD		Blue
	Tape		Red
	Tuner/Band		Green
	Stop CD		Stop
	I<</<< CD		<<
	>>/>>I CD		>>
	Play CD		Play
	Menu		D. Menu
	Display		Info
	Disc/Deck 1/2		Menu
	Up		Up
	Down		Down
	Right		Right


 

 




 







 
 
Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Select		Ok
	Test		Back
	Pro Logic		Media
	Center-		Shift + Ch -
	Center+		Shift + Ch +
	Surround +		Ch +
	Surround -		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Power Tape		Shift + Power
	Stop Tape		Shift + Stop
	Play Tape		Shift + Play
	I<</<< Tape		Shift + <<
	>>/>>I Tape		Shift + >>
	Disc/Deck 1/2		Shift + Menu



Tape



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	1 CD-Tape		1
	2 CD-Tape		2
	3 CD-Tape		3
	4 CD-Tape		4
	5 CD-Tape		5
	6 CD-Tape		6
	7 CD-Tape		7
	8 CD-Tape		8
	9 CD-Tape		9
	0 CD-Tape		0
	>10 / - / - CD-Tape		Guide
	Direct Tuning/Disc Enter		Text





Originalfernbedienung Ersatzfernbedienung

	Power VCR		Power
	VCR		Smart
	Tape		Red
	TV		TV/R
	CD		Yellow
	DVD		Blue
	Tuner/Band		Green
	Stop		Stop
	I<</<<		<<
	>>/>>I		>>
	Play		Play
	1 VCR		1
	2 VCR		2
	3 VCR		3
	4 VCR		4
	5 VCR		5
	6 VCR		6




 



 






 
Originalfernbedienung Ersatzfernbedienung

	7 VCR		7
	8 VCR		8
	9 VCR		9
	0 VCR		0
	>10/-/- VCR		Guide
	Direct Tuning/Disc Enter		Text
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Select		Ok
	Disc/Deck 1/2		Menu
	Display		Info
	Menu		D. Menu







Originalfernbedienung Ersatzfernbedienung

	Test		Back
	Pro Logic		Media
	Center-		Shift + Ch -
	Center+		Shift + Ch +
	Surround +		Ch +
	Surround -		Ch -
	Power Tuner/Band		Shift + Power
	1 Tuner/Band		Shift + 1
	2 Tuner/Band		Shift + 2
	3 Tuner/Band		Shift + 3
	4 Tuner/Band		Shift + 4
	5 Tuner/Band		Shift + 5
	6 Tuner/Band		Shift + 6
	7 Tuner/Band		Shift + 7
	8 Tuner/Band		Shift + 8
	9 Tuner/Band		Shift + 9
	0 Tuner/Band		Shift + 0

Originalfernbedienung Ersatzfernbedienung

	>10/-/		Shift + Guide

