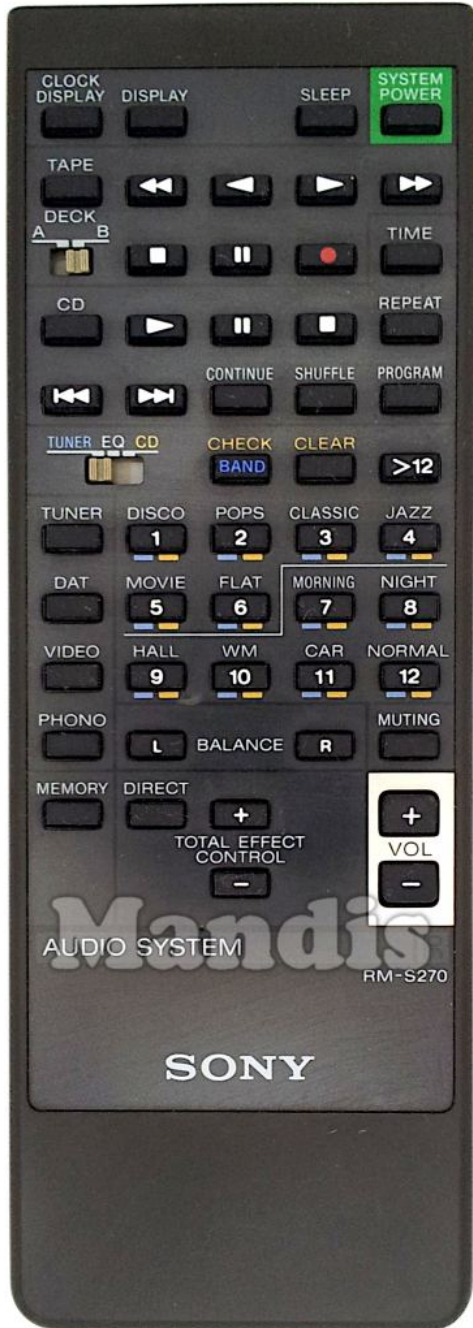 

 

 
 

 
 







 
 

 

 
 






 
 

 



 





 
 
 
 
 

 

 
 
 

 
 
 

 
 

Originalfernbedienung	Ersatzfernbedienung
	Power
	+ Shift + Info
	Info
	Sleep
	Red
	Green
	Yellow
	Blue
	+ Shift + Red
	+ Shift + Green
	Menu
	3D
	+ Shift + 3D
	+ Shift + 1
	1
	+ Shift + 3
	2

Originalfernbedienung	Ersatzfernbedienung
	3
	+ Shift + 4
	4
	+ Shift + 5
	5
	+ Shift + 6
	6
	+ Shift + 7
	7
	+ Shift + 8
	8
	+ Shift + 9
	9
	+ Shift + Guide
	Guide
	+ Shift + 0
	0

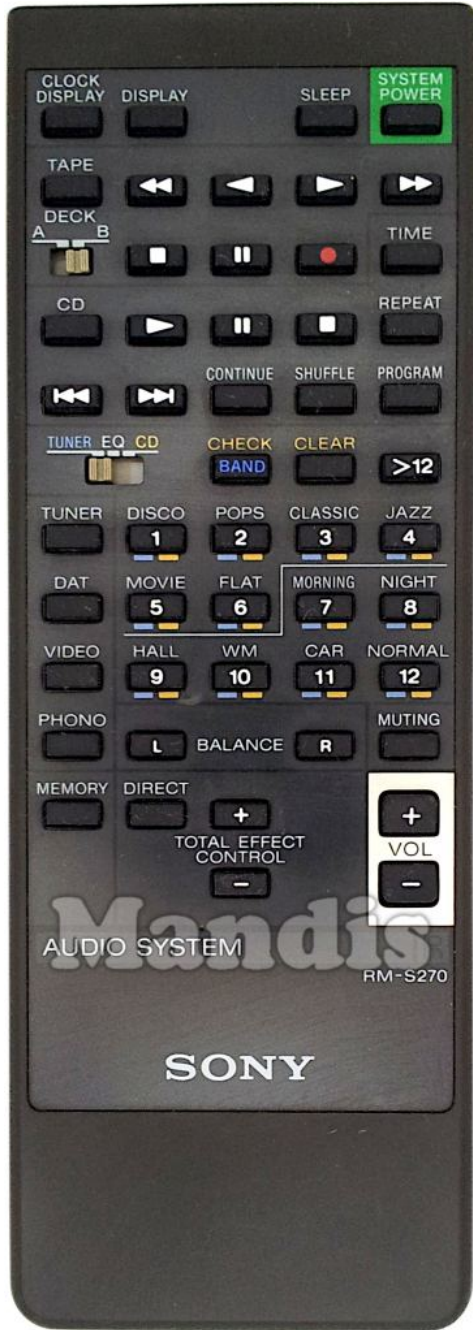 






 

 

 

 

 

 

 

 

 



 





 




Originalfernbedienung	Ersatzfernbedienung
 System Power	 Power
 Clock Display	 Shift + Info
 Display	 Info
 Sleep	 Sleep
 Tape	 Red
 Tuner	 Green
 CD	 Yellow
 DAT	 Blue
 Video	 Shift + Red
 Phono	 Shift + Green
 Play CD	 Play
 Pause CD	 Pause
 Stop CD	 Stop
 I<< CD	 I<<
 >>I CD	 >>I
 Time	 AV
 Repeat	 Text

Originalfernbedienung	Ersatzfernbedienung
 Continue	 Format
 Shuffle	 TV/R
 Program	 Shift + Sleep
 Check	 Eject
 Clear	 Exit
 > 12 CD	 3D
 >12 EQ	 Shift + 3D
 Disco	 Shift + 1
 1 CD	 1
 Pops	 Shift + 2
 2 CD	 2
 3 CD	 3
 Clasic	 Shift + 3
 Jazz	 Shift + 4
 4 CD	 4
 5 CD	 5
 Movie	 Shift + 5

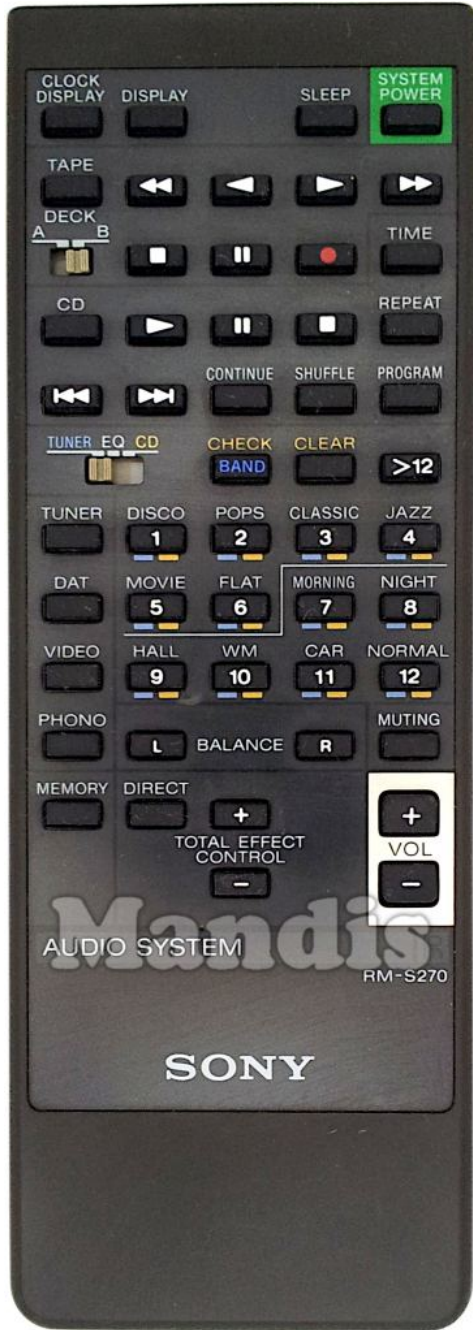 




Originalfernbedienung	Ersatzfernbedienung
 System Power	 Power
 Clock Display	 Shift + Info
 Display	 Info
 Sleep	 Sleep
 Tape	 Red
 Tuner	 Green
 CD	 Yellow
 DAT	 Blue
 Video	 Shift + Red
 Phono	 Shift + Green
 << Tape Deck	 <<
 < Tape Deck A	 I<<
 > Tape Deck A	 Play
 >> Tape Deck	 >>
 Stop Tape Deck A	 Stop
 Pause Tape Deck	 Pause
 Rec Tape Deck	 Rec

Originalfernbedienung	Ersatzfernbedienung
 >12 EQ	 Shift + 3D
 Disco	 Shift + 1
 Pops	 Shift + 2
 Clasic	 Shift + 3
 Jazz	 Shift + 4
 Movie	 Shift + 5
 Falt	 Shift + 6
 Morning	 Shift + 7
 Night	 Shift + 8
 Hall	 Shift + 9
 WM	 Shift + Guide
 Car	 Shift + 0
 Normal	 Shift + Pre Ch
 Balance L	 Left
 Balance R	 Right
 Memory	 Media
 Direct	 Smart





Originalfernbedienung	Ersatzfernbedienung		
	System Power		Power
	Clock Display	+	Shift + Info
	Display		Info
	Sleep		Sleep
	Tape		Red
	Tuner		Green
	CD		Yellow
	DAT		Blue
	Video	+	Shift + Red
	Phono	+	Shift + Green
	<< Tape Deck		<<
	< Tape Deck B		l<<
	> Tape Deck B		Play
	>> Tape Deck		>>
	Stop Tape Deck B		Stop
	Pause Tape Deck		Pause
	Rec Tape Deck		Rec

Originalfernbedienung	Ersatzfernbedienung		
>12 EQ button"/>	>12 EQ	+	Shift + 3D
	Disco	+	Shift + 1
	Pops	+	Shift + 2
	Clasic	+	Shift + 3
	Jazz	+	Shift + 4
	Movie	+	Shift + 5
	Falt	+	Shift + 6
	Morning	+	Shift + 7
	Night	+	Shift + 8
	Hall	+	Shift + 9
	WM	+	Shift + Guide
	Car	+	Shift + 0
	Normal	+	Shift + Pre Ch
	Balance L		Left
	Balance R		Right
	Memory		Media
	Direct		Smart



