
 
 



 


 
 
 






 


 

 



 
 

 
 

 


 
 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off	 Power	Exit	 Exit
Mute	 Mute	Menu Down	 Down
Epg	 +  Shift + Guide	Back	 Back
App	 Media	Volume+	 Vol +
Info	 Info	Audio	 Dual
Subt.List	 Subt	CH/Page+	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
TV	 TV/R	CH/Page-	 Ch -
Video	 D. Menu	1. ?	 1
Zoom	 Eject	2abc	 2
TV/SAT	 AV	3def	 3
Menu	 Menu	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 +  Shift + Info	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 Ok	8tuv	 8
Menu Right	 Right	9wxyz	 9



Originalfernbedienung    Ersatzfernbedienung    Originalfernbedienung    Ersatzfernbedienung

Guide Pilote		Guide	
0/10		0	
FAV Pref.		Pre Ch	
Red		Red	
Green		Green	
Yellow		Yellow	
Blue		Blue	

