















 









 




























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV / VCR		TV/Radio /
	VCR		Shift + 4
	Eject		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Display		Display / Media
	Up		Up
	System Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		OK
	Right		Right
	I<<		I<< / Preset-
	Down		Down
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause / Step		Pause / Step / Freeze
	Marker		Fav / Marker / PC
	Search		Red / Netflix / Search
	Input		AV / Input / RDS
	Rec / ITR		Rec / Rec Mode
	Program		Shift + TV/Radio / Program
	Clear		Exit / Cancel / Clear
	LP		Setup / OPT /
	C.Lock		Back / Return



