





































Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	(↔)		Audio / Lang I/II
	TV		TV/Radio /
	∨		Sound / Title
	[#]→		Picture / Format
	[.≡]		Text / Goto
	[≡+]		Shift + Stop /
	[≡◆]		Shift + Zoom /
	[≡x]⊖		Back / Return
	[≡?][+]		Sleep / Timer
	1		1
	2		2
	3		3
	[≡i]		Info / Angle
	4		4
	5		5

Originalfernbedienung Ersatzfernbedienung

	6		6
	A/B		Shift + Yellow / YouTube /
	7		7
	8		8
	9		9
	Output		AV / Input / RDS
	-/--		Guide / EPG / -/--
	0		0
	C		Exit / Cancel / Clear
	IN 123		D.Menu / Top
	1-/TP Off		Fav / Marker / PC
	C00		Setup / OPT /
	2-/TP On		Shift + Fav / Marker / PC
	Vol+		Vol+
	Prog+		CH+ / Page+
	Vol-		Vol-
	Prog-		CH- / Page-





Originalfernbedienung Ersatzfernbedienung

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	→		Display / Media
	←		Left
	→+		Right
	◆		Zoom / Size
	(*)		Menu / Home
	↔		Smart / List
	[··]		OK
	[··]+		Up
	[...]		Subtitle / EQ
	Contrast+		>>I / Preset+
	Brightness+		Shift + Right
	[··]-		Down
	Prog+ Down		Shift + CH+ /



















Originalfernbedienung Ersatzfernbedienung

	Contrast-		I<< / Preset-
	Brightness-		Shift + Left
	Power Down		Shift + Power
	Prog- Down		Shift + CH- /
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze





Originalfernbedienung Ersatzfernbedienung

	Power Down		Power
	Prog+ Down		CH+ / Page+
	Prog- Down		CH- / Page-
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	>>		>> / Tune+
	Play		Play / Slow
	<<		<< / Tune-

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power Down		Power
	Prog+ Down		CH+ / Page+
	Prog- Down		CH- / Page-
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

