























 



 





 









Originalfernbedienung	Ersatzfernbedienung	
	Mute	 Mute / Dimmer
	Power	 Power
	Sleep	 Sleep / Timer
	Vol+	 Vol+
	EQ	 Subtitle / EQ
	Timer	 Shift + Sleep / Timer
	Vol-	 Vol-
	Band	 D.Menu / Top
	Prog/Mem	 TV/Radio /
	Rand	 Blue / Prime Video / Random
	Intro	 OK
	Repeat	 Green / APP / Repeat
	Play	 Play / Slow
	Pause	 Pause / Step / Freeze
	I<<	 I<< / Preset-
	>>I	 >>I / Preset+
	Stop	 Stop / Hold

Originalfernbedienung	Ersatzfernbedienung	
	Album/Presets-	 CH- / Page-
	Album/Presets+	 CH+ / Page+
	ST/Mono/Find	 Sound / Title

