




 

 









 

 


 



 
 



 




 


 


 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off	 Power	Menu Right	 Right
Next	 >>I	Return	 Back
Audio Off	 Mute	Progr.	 Sleep
Slow Down	 Ch -	Rewind	 <<
Slow Up	 Ch +	Menu Down	 Down
Auto/Track	 Media	Top Menu	 D. Menu
Rep/A-B	 +  Shift + Text	Volume+	 Vol +
Stop	 Stop	Prev.	 I<<
Pause	 Pause	Volume-	 Vol -
Title	 List	1	 1
Subt.	 Subt	2	 2
Repeat/1/All	 Text	3	 3
Zoom	 Eject	4	 4
Menu	 Menu	Shuffle	 TV/R
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	Digest	 Smart



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
7			
8			
Play			
9			
+10			
Record			
Clear/00:00			
0			
C/CH			
F.Forward			
Setup			

