












 





 


 











 
 
 


 

 


 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	TV / AV		AV
	Menu		Menu
	Sleep		Sleep
	Up / PR+		Up
	Up / PR+		Ch +
	Down / PR-		Down
	Down / PR-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	1		1
	2		2
	3		3

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	APC		I<<<
	ASC		<<<
	ARC		>>>
	PIP		Smart
	Review		Info
	MTS		Dual
	Multi PIP		Format
	Multimedia		Media
	Red / PIP CH+		Red
	Green / PIP CH-		Green





Originalfernbedienung Ersatzfernbedienung

 SWAP Yellow / PIP SWAP	 C Yellow
 INPUT Blue / PIP Input	 D Blue
 TEXT Text	 REPEAT TEXT Text
 MODE Mode	 SETTINGS OPT Options
 SIZE / SIZE Size / PIP Size	 ZOOM Eject
 MIX Mix	 SEARCH TV/R TV/R
 SUB PAGE Sub Page	 AD SUBT Subt
 INDEX Index	 SHIFT + DISPLAY INFO Shift + Info
 REVEAL Reveal	 E-MANUAL D.MENU D. Menu
 HOLD STILL Hold / PIP Still	 Stop Stop
 UPDATE POSITION Update / PIP Position	 GUIDE Guide

Originalfernbedienung Ersatzfernbedienung

