








 
 



 

 
 

 


 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | TV / AV |  | AV |
|  | Menu |  | Menu |
|  | Sleep |  | Sleep |
|  | Up / PR+ |  | Up |
|  | Up / PR+ |  | Ch + |
|  | Down / PR- |  | Down |
|  | Down / PR- |  | Ch - |
|  | Right / Vol+ |  | Right |
|  | Right / Vol+ |  | Vol + |
|  | Left / Vol- |  | Left |
|  | Left / Vol- |  | Vol - |
|  | OK |  | Ok |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|--------|
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | APC |  | I<< |
|  | ASC |  | << |
|  | ARC |  | >> |
|  | PIP |  | Smart |
|  | Review |  | Info |
|  | MTS |  | Dual |
|  | Multi PIP |  | Format |
|  | Multimedia |  | Media |
|  | Red / PIP CH+ |  | Red |
|  | Green / PIP CH- |  | Green |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-----------------------|--|--------------|
|  SWAP | Yellow / PIP SWAP |  C | Yellow |
|  INPUT | Blue / PIP Input |  D | Blue |
|  TEXT | Text |  REPEAT TEXT | Text |
|  MODE | Mode |  SETTINGS OPT | Options |
|  SIZE / SIZE | Size / PIP Size |  ZOOM | Eject |
|  MIX | Mix |  SEARCH TV/R | TV/R |
|  SUB PAGE | Sub Page |  AD SUBT | Subt |
|  INDEX | Index |  SHIFT +  DISPLAY INFO | Shift + Info |
|  REVEAL | Reveal |  E-MANUAL D.MENU | D. Menu |
|  HOLD STILL | Hold / PIP Still |  | Stop |
|  UPDATE POSITION | Update / PIP Position |  GUIDE | Guide |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

