



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Subtitle		Subt
	Guide		Guide
	Freeze		Pause
	FAV.CH		Pre Ch
	Sleep		Sleep
	Mute		Mute
	I/II		Dual
	P.Size		Shift + Format
	[≡]/[≡]		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	ENT		Back
	Jump		Options
	Info		Info
	Input		AV
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Exit		Exit
	Menu		Menu
	OK		Ok
	Up		Up
	Down		Down
	Right		Right





**Originalfernbedienung**   **Ersatzfernbedienung**   **Originalfernbedienung**   **Ersatzfernbedienung**

	Left		Left
	S.Mode	+	Shift + Dual
	Red		Red
	P.Mode		Format
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡i]		Smart
	[≡?]		TV/R
	[≡♦]		Eject
	[≡+]		Media

