 
 

 




Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	TV		TV/Radio /
	DVD		Shift + 2
	Radio		Shift + TV/Radio / Program
	Rec Menu		Shift + Rec / Rec Mode
	[-]/←AB		Shift + Yellow / YouTube /
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9










 

 


 
 



 
Originalfernbedienung Ersatzfernbedienung

	0/AV		0
	EPG/DVD-AV		Guide / EPG / -/-
	Assist/Card		Smart / List
	PIP		Picture / Format
	Text/Disc-M		Text / Goto
	Menu		Menu / Home
	End		Exit / Cancel / Clear
	Info		Info / Angle
	Vol+		Vol+
	Up		Up
	P+		CH+ / Page+
	Left		Left
	OK		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	P-		CH- / Page-





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

	Red/C-Set		Red / Netflix / Search		
	Green/SV		Green / APP / Repeat		
	Yellow/Zoom		Yellow / YouTube / Repeat		
	Blue/Marker		Blue / Prime Video / Random		
	<<		<< / Tune-		
	Play		Play / Slow		
	>>		>> / Tune+		
	Rec		Rec / Rec Mode		
	Rec		Shift + Stop /		
	Pause		Pause / Step / Freeze		
	Stop		Stop / Hold		









Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	TV		TV/Radio /
	DVD		Shift + 2
	Radio		Shift + TV/Radio / Program
	Rec Menu		Shift + Rec / Rec Mode
	[-]/←AB		Shift + Yellow / YouTube /
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9















 

 





Originalfernbedienung Ersatzfernbedienung

	0/AV		0
	EPG/DVD-AV		Guide / EPG / -/-
	Assist/Card		Smart / List
	PIP		Picture / Format
	Text/Disc-M		Text / Goto
	Menu		Menu / Home
	End		Exit / Cancel / Clear
	Info		Info / Angle
	Vol+		Vol+
	Up		Up
	P+		CH+ / Page+
	Left		Left
	OK		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	P-		CH- / Page-





Originalfernbedienung Ersatzfernbedienung

	Red/C-Set		Red / Netflix / Search
	Green/SV		Green / APP / Repeat
	Yellow/Zoom		Yellow / YouTube / Repeat
	Blue/Marker		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Shift + Stop /
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung


 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Audio		Audio / Lang I/II
	PIP		Picture / Format
	Tv		TV/Radio /
	Text/Disc-M		Text / Goto
	Menu		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK



 
Originalfernbedienung Ersatzfernbedienung

	Right		Right
	End		Exit / Cancel / Clear
	Down		Down
	Vol+		Vol+
	Assist/Card		Smart / List
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9












Originalfernbedienung Ersatzfernbedienung

	EPG/DVD-AV		Guide / EPG / -/--
	0/AV		0
	Red/C-Set		Red / Netflix / Search
	Green/SV		Green / APP / Repeat
	Yellow/Zoom		Yellow / YouTube / Repeat
	Blue/Marker		Blue / Prime Video / Random
	Rec		Shift + Stop /
	Rec Menu		Shift + Rec / Rec Mode
	Radio		Shift + TV/Radio / Program
	DVD		Shift + 2
	[-] /<-AB		Shift + Yellow / YouTube /


















Originalfernbedienung Ersatzfernbedienung




Originalfernbedienung Ersatzfernbedienung

Power		Power
Mute		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Rec		Rec / Rec Mode
<<		<< / Tune-
>>		>> / Tune+
Audio		Audio / Lang I/II
PIP		Picture / Format
TV		TV/Radio /
Text/Disc-M		Text / Goto
Menu		Menu / Home
Up		Up
Info		Info / Angle
Left		Left
OK		OK






 

 


Originalfernbedienung Ersatzfernbedienung

Right		Right
End		Exit / Cancel / Clear
Down		Down
Vol+		Vol+
Assist/Card		Smart / List
P+		CH+ / Page+
Vol-		Vol-
P-		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9





Originalfernbedienung Ersatzfernbedienung

EPG/DVD-AV		Guide / EPG / -/--
0/AV		0
Red/C-Set		Red / Netflix / Search
Green/SV		Green / APP / Repeat
Yellow/Zoom		Yellow / YouTube / Repeat
Blue/Marker		Blue / Prime Video / Random
Rec	 + 	Shift + Stop /
Rec Menu	 + 	Shift + Rec / Rec Mode
Radio	 + 	Shift + TV/Radio / Program
DVD	 + 	Shift + 2
- [] / ← AB	 + 	Shift + Yellow / YouTube /

Originalfernbedienung Ersatzfernbedienung

