



**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Mute		Mute / Dimmer
	DVD/5.1		2
	AUX		7
	TV		TV/Radio /
	CD		3
	5.1 EXT		5
	Reset		Back / Return
	STE./3STE		Setup / OPT /
	SURRE+		Shift + CH+ /
	Center+		Up
	SW+		Shift + Right
	Q.Sound		Sound / Title
	Q.Sound		Shift + Sound / Title
	SURRE-		Shift + CH- /
	Center-		Down
	SW-		Shift + Left

**Originalfernbedienung    Ersatzfernbedienung**

	Treble-		CH- / Page-
	Mast.Vol+		Vol+
	Treble+		CH+ / Page+
	Balance.L		Left
	Balance		OK
	Bass+		>> / Tune+
	Bass-		<< / Tune-
	Balance.R		Right
	Mast.Vol-		Vol-

