


 

 



 

 

 

 

 

 

 



 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-/+10		Guide
	>/Option		Options
	Vol+		Vol +
	Vol-		Vol -
	Stop		Stop
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

	Slow/Search >>		>>
	<< Slow/Search		<<
	>>I/Skip Up		>>I
	I<</Skip Down		I<<
	Play DVD/CD		Play
	Play USB		Red
	FM/AM/Ext-In		TV/R
	Top Menu/Direct Navigator		Shift + Menu
	Start		Blue
	Menu/Play List		Menu
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Functions		Pre Ch





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
SETUP	Setup	E-MANUAL D.MENU	D. Menu
SOUND	Sound	SOUND DUAL	Dual
CANCEL	Cancel	CLEAR EXIT	Exit
-PLAY MODE -REPEAT	Play Mode/Repeat	REPEAT TEXT	Text
-SLEEP -TIMER PLAY	Sleep/Timer Play	PROG SLEEP	Sleep
CLOCK/ TIMER	Clock/Timer	TIMER AV	AV
MUTING	Muting	MUTE	Mute
FL DISPLAY	FL Display	DISPLAY INFO	Info
ONE TOUCH PLAY	One Touch Play	HOME SMART	Smart
TV	Power Tv	SHIFT + [TV Power]	Shift + Power
TV/AV	TV/AV Tv	SHIFT + [TV/AV]	Shift + AV
+ VOL	Vol+ Tv	SHIFT + [+ VOL]	Shift + Vol +
- VOL	Vol- Tv	SHIFT + [- VOL]	Shift + Vol -

