

 







 
 


 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Open / Close		Exit
	Display		Info
	Setup		Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH+		Ch +
	CH-		Ch -
	Guider		Guide

**Originalfernbedienung Ersatzfernbedienung**

	Contents		Smart
	Source		AV
	TV / Mode		TV/R
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Top Menu		D. Menu
	Menu		Menu
	Stop		Stop
	Play		Play
	>		Pause
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>





**Originalfernbedienung Ersatzfernbedienung**

	Navi.		Red
	Edit		Green
	Copy		Yellow
	Time Shift		Blue
	Record		Rec
	HDD/DVD		Media
	ShowView		3D
	Timer	 + 	Shift + AV
	Timer		Sleep

**Originalfernbedienung Ersatzfernbedienung**