





 

 



 





 





 



 



 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|-------------------------|-------------------------------------------------------------------------------------|-----------------------|
|  | Standby / On |  | Power |
|  | Sleep |  | Sleep / Timer |
|  | Timer |  | Shift + Sleep / Timer |
|  | Dimmer |  | Shift + Mute / Dimmer |
|  | Input Sel. CD |  | 3 |
|  | Input Sel. Bluetooth |  | 9 |
|  | Input Sel. |  | Fav / Marker / PC |
|  | Input Sel. Tuner |  | 6 |
|  | Input Sel. USB |  | 8 |
|  | Input Sel. Line Digital |  | 2 |
|  | I<< / Preset- |  | I<< / Preset- |
|  | Play / Pause |  | Pause / Step / Freeze |
|  | Play / Pause |  | Play / Slow |
|  | >>I / Preset+ |  | >>I / Preset+ |
|  | << / Tune- |  | << / Tune- |
|  | Stop |  | Stop / Hold |
|  | >> / Tune+ |  | >> / Tune+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|------------------|---------------------------------------------------------------------------------------|-----------------------|
|  | Repeat / Shuffle |  | Green / APP / Repeat |
|  | Memory |  | Smart / List |
|  | Clear |  | Exit / Cancel / Clear |
|  | Mode |  | Picture / Format |
|  | i / Now Playing |  | Info / Angle |
|  | Left |  | Left |
|  | Up |  | Up |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Setup |  | Setup / OPT / |
|  | Down |  | Down |
|  | Return |  | Back / Return |
|  | Volume+ |  | Vol+ |
|  | Sound |  | Sound / Title |
|  | Volume- |  | Vol- |
|  | Mute |  | Mute / Dimmer |

