



| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|-----------------------|---------------------|
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | 0 | | 0 |
| | TIME | | AV |
| | REPEAT | | Text |
| | REPEAL A-B | | TV/R |
| | DISPLAY | | Info |
| | STOP | | Stop |
| | PAUSE | | Pause |
| | << | | << |

| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|-----------------------|---------------------|
| | >> | | >> |
| | PLAY/PAUSE | | Play |
| | I<< | | I<< |
| | >>I | | >>I |
| | EJECT | | Eject |
| | MUTE | | Mute |
| | VOLUME+ | | Vol + |
| | VOLUME- | | Vol - |
| | INPUT CD | | Yellow |
| | INPUT TUNER | | Green |
| | INPUT AUX | | Red |
| | INPUT VIDEO | | Blue |
| | INPUT TAPE 1 | | Guide |
| | INPUT TAPE 2 | | Pre Ch |
| | | | |
| | | | |
| | | | |

