




Originalfernbedienung Ersatzfernbedienung

|   |              |   |                           |
|---|--------------|---|---------------------------|
|    | Standby      |    | Power                     |
|    | Open / Close |    | Eject / Surround          |
|    | Play Mode    |    | Picture / Format          |
|    | Timer        |    | Sleep / Timer             |
|    | Repeat       |    | Green / APP / Repeat      |
|    | A-B          |    | Yellow / YouTube / Repeat |
|    | Title        |    | Sound / Title             |
|    | Display      |    | Display / Media           |
|    | Zoom         |    | Zoom / Size               |
|    | Menu         |    | Menu / Home               |
|    | Setup        |    | Setup / OPT /             |
|    | Return       |    | Back / Return             |
|   | Watch TV     |   | Smart / List              |
|  | Up           |  | Up                        |
|  | Left         |  | Left                      |
|  | Select       |  | OK                        |
|  | Right        |  | Right                     |







 

 

 









 




 
Originalfernbedienung Ersatzfernbedienung

|   |                |   |                        |
|---|----------------|---|------------------------|
|    | Down           |    | Down                   |
|    | Play / Pause   |    | Play / Slow            |
|    | Play / Pause   |    | Pause / Step / Freeze  |
|    | Stop           |    | Stop / Hold            |
|    | I<< Skip       |    | I<< / Preset-          |
|    | Skip >>I       |    | >>I / Preset+          |
|    | << Search      |    | << / Tune-             |
|    | Search >>      |    | >> / Tune+             |
|    | Program+       |    | CH+ / Page+            |
|    | Rec. Mode      |    | Shift + Rec / Rec Mode |
|    | TV / DVD       |    | TV/Radio /             |
|    | Program-       |    | CH- / Page-            |
|   | Record         |   | Rec / Rec Mode         |
|  | Insert Chapter |  | D.Menu / Top           |
|  | Subtitle       |  | Subtitle / EQ          |
|  | Video Source   |  | AV / Input / RDS       |
|  | Audio          |  | Audio / Lang I/II      |





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

|   |             |   |                        |
|---|-------------|---|------------------------|
|    | Angle       |    | Info / Angle           |
|    | Search Mode |    | Red / Netflix / Search |
|    | 1           |    | 1                      |
|    | 2           |    | 2                      |
|    | 3           |    | 3                      |
|    | Clear       |    | Exit / Cancel / Clear  |
|    | 4           |    | 4                      |
|    | 5           |    | 5                      |
|    | 6           |    | 6                      |
|    | 7           |    | 7                      |
|  | 8           |  | 8                      |
|  | 9           |  | 9                      |
|  | 0           |  | 0                      |

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

