
 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		Guide
	Add / Clear		Exit
	<<		<<
	>>		>>
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

	Play		Play
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Setup		Options
	Navigat		Smart
	Title		List
	Menu		Menu
	Subtitle		Subt
	Angle		Format
	Source		AV
	Rec		Rec





Originalfernbedienung Ersatzfernbedienung

TIMER	Timer	+ AV	Shift + AV
EDIT	Edit	MEDIA	Media
USB	USB		Red
DVD	DVD		Green
HDD	HDD		Yellow
DISC OPER	Disc Oper	D.MENU	D. Menu
SLOW	Slow	+	Shift + Pause
RETURN	Return	BACK	Back
REPEAT	Repeat	TEXT	Text
ZOOM	Zoom	+	Shift + Eject
CH+	CH+	CH	Ch +
CH-	CH-	CH	Ch -
P/N	P/N	TV/R	TV/R
AUDIO	Audio	DUAL	Dual
VOL+	Vol+	VOL	Vol +
L/P	L/P	INFO	Info
MUTE	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

VOL-	Vol-	-	Vol -

