


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SUBTIL		Subt
	TV / SAT		Smart
	FAV		Pre Ch
	RCL		Back
	Up / CH+		Up

Originalfernbedienung Ersatzfernbedienung

	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	Menu		Menu
	Exit		Exit
	TXT		Text
	USB		Media
	Info		Info
	Audio		Dual
	M / P		Options
	Up / CH+		Ch +
	Page+		Shift + Ch +
	Page-		Shift + Ch -





Originalfernbedienung Ersatzfernbedienung

	Red / SAT		AV
	Red / SAT		Red
	Green / Zoom		Green
	Green / Zoom		Eject
	Yellow / Pause		Yellow
	Yellow / Pause		Shift + Pause
	Blue / TV/Radio		Blue
	Blue / TV/Radio		TV/R
	<<		<<
	>>		>>
	Play		Play
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Pause		Pause
	Slow		Shift + Play

Originalfernbedienung Ersatzfernbedienung

