 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	USB		Media
	Power Tv		Shift + Power
	Video Sel		Smart
	HDMI Sel		AV
	Repeat		Text
	A-B Repeat		Shift + Text
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0/I.Skip		0
	Bookmark		Guide
	Step		Options
	<<		<<
	I.Replay		3D
	Pause		Pause
	>>		>>
	l<<		l<<
	Stop		Stop
	Play		Play
	>>l		>>l
	Tv Vol+		Vol +
	Tv Vol-		Vol -
	Tv/Video		TV/R
	Tv CH+		Ch +
	Tv CH-		Ch -
	Menu		Menu



