
 

 

 













 
 
 





 






Originalfernbedienung Ersatzfernbedienung




 


 





	Power		Power
	Tv/Radio		TV/R
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	Recall		Back
	Menu		Menu
	FAV		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/F1		Red
	Green/F2		Green
	Yellow/F3		Yellow
	Blue/F4		Blue
	Subt		Subt
	Audio		Dual




Originalfernbedienung Ersatzfernbedienung

	TXT		Text
	Zoom		Eject
	Play/Pause		Play
	Stop		Stop
	I>/Slow		Pause
	Rec		Rec
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I

Originalfernbedienung Ersatzfernbedienung

