




























Originalfernbedienung Ersatzfernbedienung

AVR Power On		Power
Mute		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
<<		<< / Tune-
>>		>> / Tune+
I<<		I<< / Preset-
>>I		>>I / Preset+
Audio Effects		Audio / Lang I/II
Surround Modes		Eject / Surround
Video Modes		Picture / Format
Sleep		Sleep / Timer
Menu		Menu / Home
Up		Up
Info		Info / Angle
Left		Left







Originalfernbedienung Ersatzfernbedienung

OK		OK
Right		Right
Back/Exit		Exit / Cancel / Clear
Down		Down
Last		Back / Return
Vol+		Vol+
AVR		Smart / List
CH/Page Up		CH+ / Page+
Vol-		Vol-
CH/Page Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7










Originalfernbedienung Ersatzfernbedienung












1		1
DVR		Display / Media
DVR Power On		Power
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Menu		Menu / Home
Up		Up
Down		Down
Right		Right
Left		Left

Originalfernbedienung Ersatzfernbedienung


















Mute		Mute / Dimmer
Vol+		Vol+
Vol-		Vol-
CH/Page Up		CH+ / Page+
CH/Page Down		CH- / Page-




Originalfernbedienung Ersatzfernbedienung


Bluray Power		Power
Mute		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Rec		Rec / Rec Mode
<<		<< / Tune-
>>		>> / Tune+
I<<		I<< / Preset-
>>I		>>I / Preset+
Disc Menu		D.Menu / Top
Menu		Menu / Home
Up		Up
Left		Left
OK		OK
Right		Right
Back/Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

Down		Down
Last		Back / Return
Vol+		Vol+
Vol-		Vol-
Blu-ray		Display / Media
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Red		Red / Netflix / Search
Green		Green / APP / Repeat




Originalfernbedienung Ersatzfernbedienung

	AVR Power On		Power
	AVR Power Off		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu / Home
	Back/Exit		Exit / Cancel / Clear
	Last		Back / Return
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	OK		OK
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH/Page Up		CH+ / Page+
	CH/Page Down		CH- / Page-
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	I>>		I>> / Preset+
	Play		Play / Slow
	Tune-		<< / Tune-



