


 

 
 


 


 
 

 





 


Originalfernbedienung Ersatzfernbedienung

	System Power		Power
	Sleep		Sleep
	Disc Skip		Shift + Smart
	CD		Yellow
	Play		Play
	Pause		Pause
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Tape		Green
	Shift		Menu
	Select 10		Info
	P.File		Ch +
	Tuner		Blue
	Phono		Red
	1		1
	2		2

Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0
	11		Guide
	12		Pre Ch
	13		AV
	14		Format
	15		3D
	16		Back
	Video 1		Smart
	Video 2		Media
	Video 3		Shift + Media















 

 

 











 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	DBFB		Options
	EQ Rec		TV/R
	Direct		Text
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Mode /L/R/L+R		Ok
	Surround		Dual
	Effect		Subt
	Vol+		Vol +
	Vol-		Vol -





 
 






 

 

 





Originalfernbedienung Ersatzfernbedienung

	<< Deck A		<<
	>> Deck A		>>
	Stop Deck A		Stop
	< Deck A		Left
	Deck A >		Right
	System Power		Power
	Vol+		Vol +
	Vol-		Vol -
	Pause Deck A		Pause
	Play Deck A		Play
	Rec Deck A		Rec
	<< Deck B		I<<
	>> Deck B		>>I
	< Deck B		SHIFT + Left
	Deck B >		SHIFT + Right
	Stop Deck B		SHIFT + Stop
	Pause Deck B		SHIFT + Pause




 

 



 



 





 


 



 

 




 
Originalfernbedienung Ersatzfernbedienung

	O Deck B		Text
	Rec Deck B		AV
	CD		Yellow
	Tape		Green
	Tuner		Blue
	Phono		Red
	Video 1		Smart
	Video 2		Media
	Video 3		Shift + Media








 




Originalfernbedienung Ersatzfernbedienung

	System Power		Power
	CD		Yellow
	Tape		Green
	Tuner		Blue
	Phono		Red
	Video 1		Smart
	Video 2		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0




 

 





 

 

 

 
Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Shift		Menu
	Video 3		Shift + Media





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Select 10	 Info	 Tuner	 Blue
 P.File	 Ch +	 Phono	 Red
 1/Hall	 1	 Video 1	 Smart
 2/Orchestra	 2	 Video 2	 Media
 3/Theater	 3	 Video 3	 Shift + Media
 4/Simulated	 4		
 5/Jazz Club	 5		
 6/Gym	 6		
 7/Disco	 7		
 8/BGM	 8		
 9/WM	 9		
 10/Car	 0		
 Vol+	 Vol +		
 Vol-	 Vol -		
 System Power	 Power		
 CD	 Yellow		
 Tape	 Green		

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Tuner	 Blue	 Tuner	 Blue
 Phono	 Red	 Phono	 Red
 Video 1	 Smart	 Video 1	 Smart
 Video 2	 Media	 Video 2	 Media
 Video 3	 Shift + Media	 Video 3	 Shift + Media

