



 





 
 







Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power ON/Off		Display	
Mute		CD F.FWD	
Every Pop		Stop	
Tape 1 Preset	 +  Shift + >>I	CD Pause	
Vol Rs-/Effect		CD Play	
Tape 2 Pre./eq		Volume+	
Funct./Direct		CD Rewind	
Woofers/Speed		Next/Prog+	
Tape 1 Stop	 +  Shift + Stop	Volume-	
Vol Rs+/S.Mode		Prev./Prog-	
Preset Pause	 +  Shift + Pause	Pr 1	
Input/Source		Program	 +  Shift + Sleep
CD Random		Pr 2	
Repeat		Pr 3	
CD/Theater		Tape 2 REC./jazz	
Tape 1 Hall/Ats	 +  Shift + I<<	Pr 4	
Sleep		Pr 5	



