




Originalfernbedienung Ersatzfernbedienung


 

 











 







 
 
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/R
	Zoom		Eject
	Info		Info
	Video		Smart
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	I<		I<<
	>I		>>I
	<<		<<
	>>		>>
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	FAV		Pre Ch
	Rec		Rec
	Stop		Stop





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Play		Play
	Pause		Pause
	Roll		Back
	File		Media
	Device		AV
	Red		Red
	Yellow		Yellow
	Blue		Blue
	Green		Green
	EPG		Guide
	Subt.		Subt
	TTX		Text
	Audio		Dual

