





 














 

 









 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Recall		Pre Ch
	Prime Video		Shift + Smart
	Home		Smart
	Q.Menu		D. Menu

Originalfernbedienung Ersatzfernbedienung

	YouTube		Shift + Media
	Menu		Menu
	Up		Up
	Netflix		Media
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Exit		Exit
	Vol+		Vol +
	Back		Back
	Vol-		Vol -
	Guide		Guide
	Mute		Mute
	Ch+		Ch +
	Ch-		Ch -
	Red		Red





Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Index / Play/Pause	 + 	Shift + Info
	Index / Play/Pause		Play
	Index / Play/Pause		Pause
	Hold / Stop		Stop
	Mix	 + 	Shift + Text
	Text / I<<		Text
	Text / I<<		I<<
	Size / >>I		Eject
	Size / >>I		>>I
	Audio Lang I/II		Dual
	Reveal / <<		<<
	Cancel / >>		>>
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

