



 
 
 






 
 










 

 
 





 

 
 
 

 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Audio Power		Shift + Power
	TV		Shift + 1
	VCR		Shift + 2
	TUNER		Shift + 3
	CD		Shift + 4
	TAPE		Shift + 5
	Direct Tuning / Disc Enter		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	CH Level-		Ch -
	CH Level+		Ch +
	Test		Text
	Pro Logic		Options
	Muting		Mute
	≥10 / -/-		Guide
	Sleep		Sleep
	Volume-		Vol -
	Volume+		Vol +

