



Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Standard		Red
	Cinema/Game		Green
	Sport		Yellow
	News		Blue
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Subwoofer Level		Ch +
	Subwoofer Level Down		Ch -
	Bass/Treble		Dual
	Dimmer		Media
	Line		Info
	On/Standby Tv		Shift + Power
	Input Tv		AV
	Channel Up Tv		Shift + Ch +
	Channel Down		Shift + Ch -

Originalfernbedienung Ersatzfernbedienung

	Volume+ Tv		Shift + Vol +
	Volume- Tv		Shift + Vol -



Tv