



| Originalfernbedienung   | Ersatzfernbedienung   |
|---|---|
|  Power |  Power     |
|  □□    |  Shift + 1 |
|  →•    |  Shift + 2 |
|  ↓     |  Shift + 3 |
|   •    |  Shift + 4 |
|  ▾     |  Shift + 5 |
|  ▾•    |  Shift + 6 |
|  1     |  1         |
|  2     |  2         |
|  3     |  3         |
|  4     |  4         |
|  5   |  5       |
|  6   |  6       |
|  7   |  7       |
|  8   |  8       |
|  9   |  9       |
|  0   |  0       |

| Originalfernbedienung  | Ersatzfernbedienung  |
|--|--|
|  1-                     |  Guide            |
|  2-                     |  Pre Ch           |
|  ? C/P                  |  Shift + Guide    |
|  C/P                    |  Shift + Pre Ch   |
|  Red / Sat              |  Red              |
|  Green+ / Memo          |  Green            |
|  Up / Size              |  Up               |
|  Yellow+ / +1           |  Yellow           |
|  Blue / □←              |  Blue             |
|  Size                   |  Format           |
|  Green- / Left / IN     |  Left             |
|  Green- / Left / IN   |  Shift + Green  |
|  Yellow- / Right / 01 |  Shift + Yellow |
|  Yellow- / Right / 01 |  Right          |
|  Text / Mix / i       |  Text           |
|  Text / Mix / i       |  Info           |
|  Down                 |  Down           |



