



**Originalfernbedienung Ersatzfernbedienung**

Power	Power		Power
	Open/Close	ZOOM	Eject
On Screen	On Screen	DISPLAY	Info
	1	1	1
Repeat	Repeat	REPEAT	Text
	2	2	2
Program	Program	SHIFT + PROG	Shift + Sleep
	3	3	3
Surround	Surround	DISC NAV	List
	4	4	4
Sound	Sound	SHIFT + SOUND	Shift + Dual
	5	5	5
Zoom	Zoom	SHIFT + ZOOM	Shift + Eject
	6	6	6
	7	7	7
	8	8	8
	9	9	9

**Originalfernbedienung Ersatzfernbedienung**

	0	0	0
Sleep	Sleep	PROG	Sleep
Aspect	Aspect	PICTURE	Format
Source	Source	TIMER	AV
Color Mode	Color Mode	APP	Media
Break	Break	CLEAR	Exit
Play	Play	PLAY MODE	Play
<<	<<	<<	<<
Pause	Pause	Pause	Pause
>>	>>	>>	>>
I<<	I<<	I<<	I<<
Stop	Stop	Stop	Stop
>>I	>>I	>>I	>>I
Top Menu	Top Menu	E-MANUAL	D. Menu
Top Menu	Top Menu	SHIFT + TOP MENU	Shift + Menu
Menu	Menu	TOP MENU	Menu
Up	Up	Up	Up





Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Setup		Options
	Return		Back
	Keystone Up		Ch +
	Keystone Down		Ch -
	Visual Setup		Smart
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	O)))/Audio		Dual
	[...]/Subtitle		Subt
	Camera/Angle		3D

Originalfernbedienung Ersatzfernbedienung


