






















 















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-------------------|
|  | Mute |  | Mute / Dimmer |
|  | Power |  | Power |
|  | Prog |  | TV/Radio / |
|  | I-II |  | Audio / Lang I/II |
|  | O to O |  | Sound / Title |
|  | PP |  | Back / Return |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | -- |  | Guide / EPG / -- |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-----------------------------|
|  | ZAP |  | Smart / List |
|  | Up / P+ |  | Up |
|  | Up / P+ |  | CH+ / Page+ |
|  | Right / Vol+ |  | Right |
|  | Right / Vol+ |  | Vol+ |
|  | Left / Vol- |  | Left |
|  | Left / Vol- |  | Vol- |
|  | Normal |  | OK |
|  | Down / P- |  | Down |
|  | Down / P- |  | CH- / Page- |
|  | Red / Memo |  | Red / Netflix / Search |
|  | Green / Audio |  | Green / APP / Repeat |
|  | Green / Audio |  | Shift + Audio / Lang I/II |
|  | Yellow / Video |  | Yellow / YouTube / Repeat |
|  | Blue / Extra |  | Blue / Prime Video / Random |
|  | [] |  | Display / Media |
|  | [+] |  | Stop / Hold |



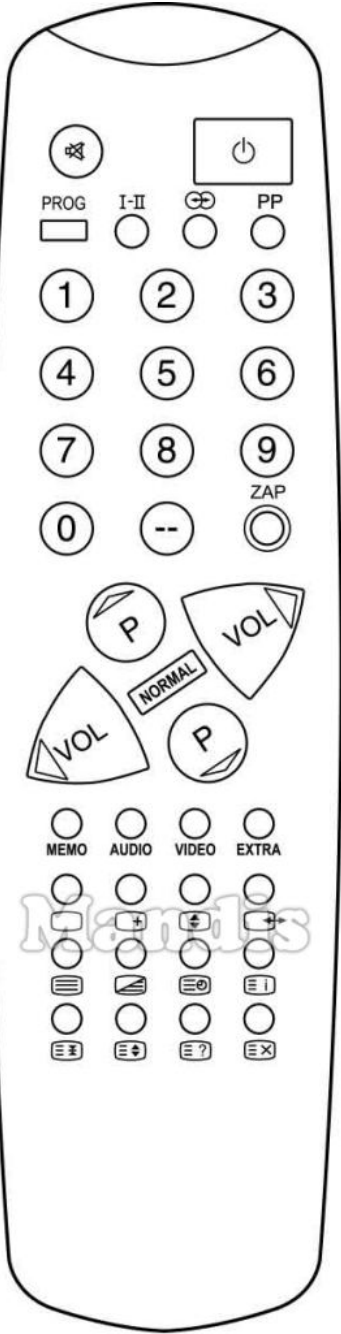 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------|---|-----------------------|
| | [◆] | | Setup / OPT / |
| | []↔ | | D.Menu / Top |
| | [⇒] | | Text / Goto |
| | [/⇒] | + | Shift + Text / |
| | [⇒ □] | | Subtitle / EQ |
| | [⇒ i] | | Info / Angle |
| | [⇒] | | Pause / Step / Freeze |
| | [⇒ ◆] | | Zoom / Size |
| | [⇒ ?] | | AV / Input / RDS |
| | [⇒ X] | | Exit / Cancel / Clear |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

