 

 

 
 
 
 


 


 

 
 
 
 
 
 

 
 
 
 

 
 
 

 
 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	PMode		Shift + Format
	SMode		Shift + Dual
	Sleep		Sleep
	Aspect		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Nicam		Dual

Originalfernbedienung Ersatzfernbedienung

	Recall		Back
	Rec List		Shift + Smart
	Rec		Rec
	Time Shift		Smart
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Display		Info
	Source		AV
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit





**Originalfernbedienung Ersatzfernbedienung**

	Vol+		Vol +
	Vol-		Vol -
	TV/Radio		TV/R
	Subtitle		Subt
	CH+		Ch +
	CH-		Ch -
	Text		Text
	Play/Pause / Rev		Play
	Play/Pause / Rev		Pause
	Hold	+	Shift + Stop
	I<< / Index		I<<
	Stop / Size		Stop
	>>I / Sub.P		>>I
	FAV		Pre Ch
	>>		>>
	<<		<<

**Originalfernbedienung Ersatzfernbedienung**