





 



 

 



 
 












 

 
 


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Alarm1		Red
	Alarm2		Blue
	Clock	 + 	Shift + AV
	Sleep		Sleep
	Display		Info

Originalfernbedienung Ersatzfernbedienung

	Audio		Dual
	Source		AV
	Mute Snooze		Mute
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	>> /Tu+		>>
	<</Tu-		<<
	Stop		Stop
	Play		Play
	Pause		Pause
	Repeat		Text
	Shuff		Media



