 


 
 






 

 






Originalfernbedienung Ersatzfernbedienung

	CD	 + 	Shift + 3
	1 / Hall		1
	TUNER	 + 	Shift + 6
	2 / Jazz		2
	MD/CD-R	 + 	Shift + 8
	3 / Rock		3
	DVD	 + 	Shift + 2
	4 / Entertainment		4
	D-TV/CBL	 + 	Shift + 1
	5 / TV Sports		5
	VCR 1	 + 	Shift + 4
	6 / Mono Movie		6
	PHONO	 + 	Shift + 0
	7 / Movie THTR 1		7
	V-AUX	 + 	Shift + 7
	8 / Movie THTR 2		8
	VCR 2/DVR	 + 	Shift + 5

Originalfernbedienung Ersatzfernbedienung

	9 / Dolby / DTS Surr.		9
	0		0
	6CH INPUT	 + 	Shift + 9
	Effect		Smart / List
	Preset+		>>I / Preset+
	Preset-		I<< / Preset-
	Test		Text / Goto
	Up		Up
	A/B/C/D/E		Info / Angle
	Left		Left
	On Screen		Display / Media
	Enter		OK
	Right		Right
	Level		Setup / OPT /
	Down		Down
	Set Menu		Menu / Home
	Standby	 + 	Shift + Power





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Power	 Power		
 Volume+	 Vol+		
 Sleep	 Sleep / Timer		
 Volume-	 Vol-		
 Mute	 Mute / Dimmer		

