





 


 



 



Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	Input DVD CD		Shift + 2
	Input Radio /		Shift + 6
	Input VCR		Shift + 4
	Input SAT		Shift + 0
	Input AV AUX		Shift + 7
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	Listen Mode		TV/Radio /
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

	Sound		Sound / Title
	10+		Guide / EPG / -/-
	Clear		Shift + Exit / Cancel / Clear
	0		0
	100+		Fav / Marker / PC
	Input Mode		AV / Input / RDS
	Front		Shift + Right
	Center		Shift + OK
	Rear		Shift + Left
	Sub-Woofer		Eject / Surround
	Repeat		Green / APP / Repeat
	Trim+		CH+ / Page+
	Volume+		Vol+
	Repeat A-B		Yellow / YouTube / Repeat
	Trim-		CH- / Page-
	Volume-		Vol-
	Top Menu		D.Menu / Top

 





 





 

 







Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Menu		Menu / Home
	PTY		Text / Goto
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	On Screen		Display / Media
	Subtitle		Subtitle / EQ
	Auto / Mono		Audio / Lang I/II
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	<<		<< / Tune-
	Tune-		Shift + << /
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	Tune+		Shift + >> /
	I<<		I<< / Preset-
	Preset-		Shift + I<< / Preset-
	>>I		>>I / Preset+
	Preset+		Shift + >>I / Preset+
	Slow		Shift + Play /
	Step		Shift + Pause / Step /
	Bass Boost		Zoom / Size
	Cine EQ.		Picture / Format

