



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display		Display / Media
	Guide		Guide / EPG / -/--
	Source		AV / Input / RDS
	Wide		Picture / Format
	MPX		Setup / OPT /
	Menu		Menu / Home
	Up		Up
	Back / Cancel		Back / Return
	Back / Cancel		Exit / Cancel / Clear
	Left / <<		Left
	Left / <<		<< / Tune-
	OK		OK
	Right / >>		Right
	Right / >>		>> / Tune+
	Mute		Mute / Dimmer
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	FAV		Fav / Marker / PC
	Vol+		Vol+
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Teletext		Text / Goto
	0		0
	Subtitle		Subtitle / EQ





Originalfernbedienung Ersatzfernbedienung

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Index / I<<		I<< / Preset-
	Index / I<<		Info / Angle
	Size / Rec/Stop		Rec / Rec Mode
	Size / Rec/Stop		Stop / Hold
	Size / Rec/Stop		Zoom / Size
	Hold / Play/Pause		Shift + Stop /
	Hold / Play/Pause		Play / Slow
	Hold / Play/Pause		Pause / Step / Freeze
	Reveal / >>I		>>I / Preset+
	Reveal / >>I		Smart / List

Originalfernbedienung Ersatzfernbedienung

