
 

 
 

 




 


 
 





 




 
 
 
 


 





Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Open/Close		Eject
	>>/Slow+		>>
	<</Slow-		<<
	Display		Info
	On Screen		3D
	Top Menu		Shift + Menu
	Thumbnail/List		List
	Menu		Menu
	Set Up		Options
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	I<<		I<<
	Play/Select		Play

Originalfernbedienung Ersatzfernbedienung

	>>I		>>I
	Recall		Pre Ch
	Stop/Clear		Stop
	Pause		Pause
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	X/Cancel		Exit
	Return		Back
	Title/Group		Text





Originalfernbedienung Ersatzfernbedienung

	Sound Effect		AV
	IP/VFP		Format
	Dimmer		Blue
	Angle/Slide Effect		Red
	Subtitle		Subt
	Audio		Dual
	Zoom		Shift + Eject

Originalfernbedienung Ersatzfernbedienung

