

 





 













 







 









 
















Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute / Dimmer
	Play / Size		Play / Slow
	Pause /		Pause / Step / Freeze
	Stop / Hold		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	S.Mode		Sound / Title
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Pic. Mode		Picture / Format
	Sleep		Sleep / Timer
	TV / Radio		TV/Radio /
	Index		D.Menu / Top
	Text		Text / Goto







































Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Recall		Back / Return
	Vol+		Vol+
	CH. List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	1		1
	2		2








Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Aspect	 + 	Shift + Picture / Format
	Home	 + 	Shift + Menu /
	Reveal	 + 	Shift + Back / Return
	Mouse	 + 	Shift + Smart / List

Originalfernbedienung Ersatzfernbedienung

	IE	 + 	Shift + Display / Media

