












 

 


 

 



















 

 

 

 



 

 




Originalfernbedienung Ersatzfernbedienung

	ST-BY		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		Smart
	AV		AV
	Menu		Menu
	Text		Text
	Before / P/C		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Next / -/--		Guide
	Up / PR+		Up
	Up / PR+		Ch +
	Down / PR-		Down
	Down / PR-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	PP		Back
	Dual		Dual
	SVC		List



