



Originalfernbedienung	Ersatzfernbedienung
Power	Power
Auto Setup	Auto
Computer 1	Comp / Video
Computer 2	Shift + Comp / Video
Video	Mode
HDMI 1	Source
HDMI 2	Shift + Source
Up	Up
Down	Down
Right	Right
Left	Left
Function	Volt / Focus
Return	Shift + Enter
Enter	Enter
Menu	Menu
Default	Help / Info
Freeze	Freeze / Timer

Originalfernbedienung	Ersatzfernbedienung
Mute	Blank / Mute
D.Zoom+/1	+ / Play
D.Zoom-/4	- / Stop
ID Set	3D / Invert
ID All	Shift + 3D /
Vol+/2	Vol + / Page +
Vol-/5	Vol - / Page -
Screen ADJ/6	Eco / Aspect
AV Mute	Shift + Blank / Mute
P-Timer/3	Shift + Freeze / Timer

