


 




 
 

 

 
 
 



 









 
 







Originalfernbedienung Ersatzfernbedienung

 


 


 
 
 

 

 


 



	Power		Power
	Open / Close		Exit
	Disc		Shift + 1
	Dock		Shift + 2
	USB		Shift + 3
	Radio		Shift + 4
	Aux		Shift + 5
	Digital In		Shift + 6
	TV		Shift + 7
	MP3 Line-In		Shift + 8
	Disc Menu		D. Menu
	Setup		Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Back / Title		Back
	Display		Info
	Prev / REW		<<
	Prev / REW		l<<
	Play / Pause		Play
	Play / Pause		Pause
	Next / FFW		>>
	Next / FFW		>>l
	Mute		Mute
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Ambisound		Smart
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Select / Program		Pre Ch
	Select / Program		Sleep
	Repeat / Shuffle		Text
	Audio Sync		Red
	Bass / Treble		Green
	Sound		Yellow
	Sound	 + 	Shift + Dual
	Subtitle		Subt
	Angle		Format
	Zoom		Eject
	Audio		Dual
	Audio		Blue

