






 

 
 







 

 

 





Originalfernbedienung Ersatzfernbedienung

	AUX		1
	Tape		2
	Tuner		3
	CD		4
	Phono		5
	Tape 1		6
	Tape 2		7
	Dir A Tape		Menu
	Dir B Tape		Info
	Rec/Pause Tape		Up
	Play Tape		Ok
	Stop Tape		Down
	<< Tape		Left
	>> Tape		Right
	A/B Tape		Exit
	Preset - Tuner		Ch -
	Preset + Tuner		Ch +

Originalfernbedienung Ersatzfernbedienung

	A/BC/D/E Tuner		Smart
	<< CD		<<
	>> CD		>>
	Disc CD		List
	Play CD		Play
	I<< CD		I<<
	>>I CD		>>I
	Pause/Stop CD		Stop
	Sleep		Sleep
	Power		Power
	Volume-		Vol -
	Volume+		Vol +

