
 






 

 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	PR List		List
	Memory		Media
	FAV		Pre Ch
	TV/Radio		TV/R
	Teletext		Text
	Guide		Guide
	Pause		Pause
	Info		Info
	Menu		Menu
	Subtitle		Subt
	Exit		Exit
	Up / CH+		Up
	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	OK		Ok
	P.Adj		Format
	Audio		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back





Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Pict	+	Shift + Format
	Search	+	Shift + TV/R
	Mode		Options
	Vol+		Vol +
	Vol-		Vol -
	EPG		D. Menu
	S.Show		Smart

Originalfernbedienung Ersatzfernbedienung

